

Fig. 1

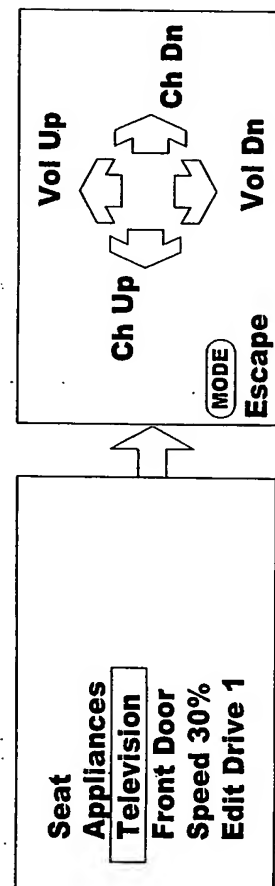
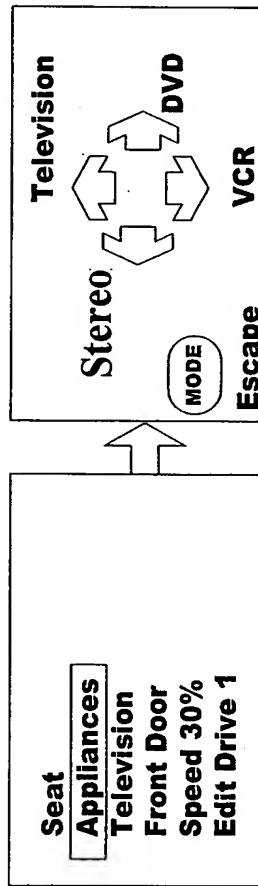
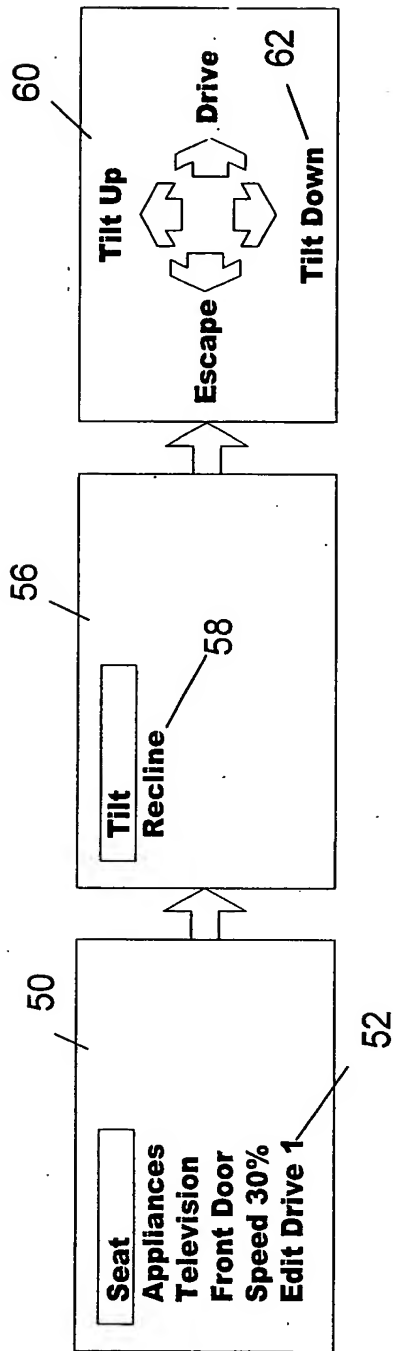


Fig. 5

Seat
Appliances
Television
Front Door
Speed 30%
Edit Drive 1

Fig. 6

Seat
Appliances
Television
Front Door
Speed 30%
Edit Drive 1

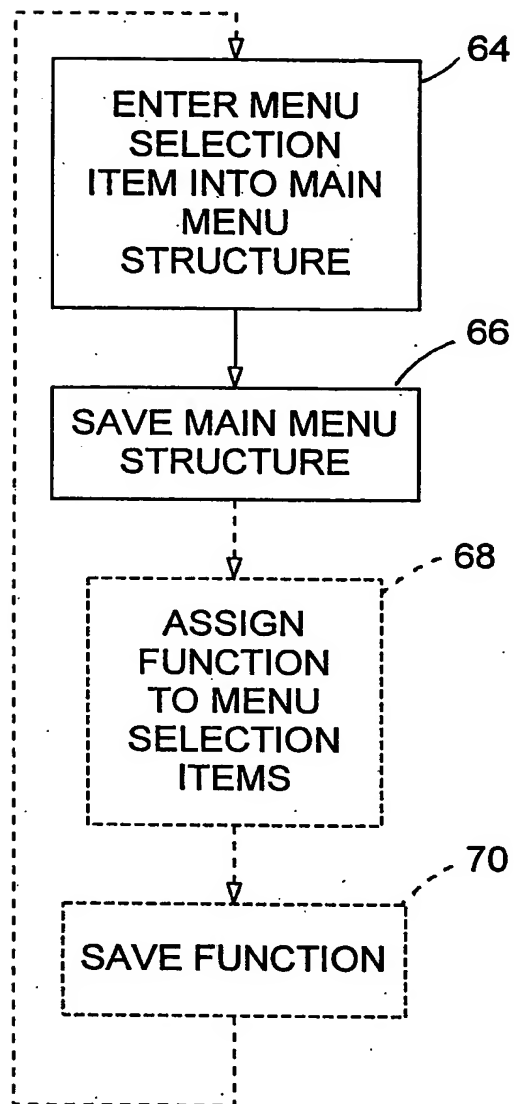


Fig. 7

User Main Menu:

Seat

Appliances

Telev

SAVE MENU

Instructions:

1. Enter the items for the Main Menu

2. Once entered CLICK SAVE MENU

3. Double Click the items to setup the function for that item
(items in red have not been setup)

Fig. 8

Instructions

1. Click EDIT MENU to change text for the menu items
2. Double Click the items to setup the function for that item
(Items in red have not been setup)

User Main Menu

Seat

Appliances

Television

Front Door

Speed 30%

Speed 100%

EDIT MENU

Selecting this Item Performs
the following Function

☒ Moves to a Sub-Menu

☐ Moves to a 2 Action Menu

☐ Moves to a 4 Action Menu

☐ Sets a Parameter Value

SAVE ITEM

Tilt

Recline

Fig. 9

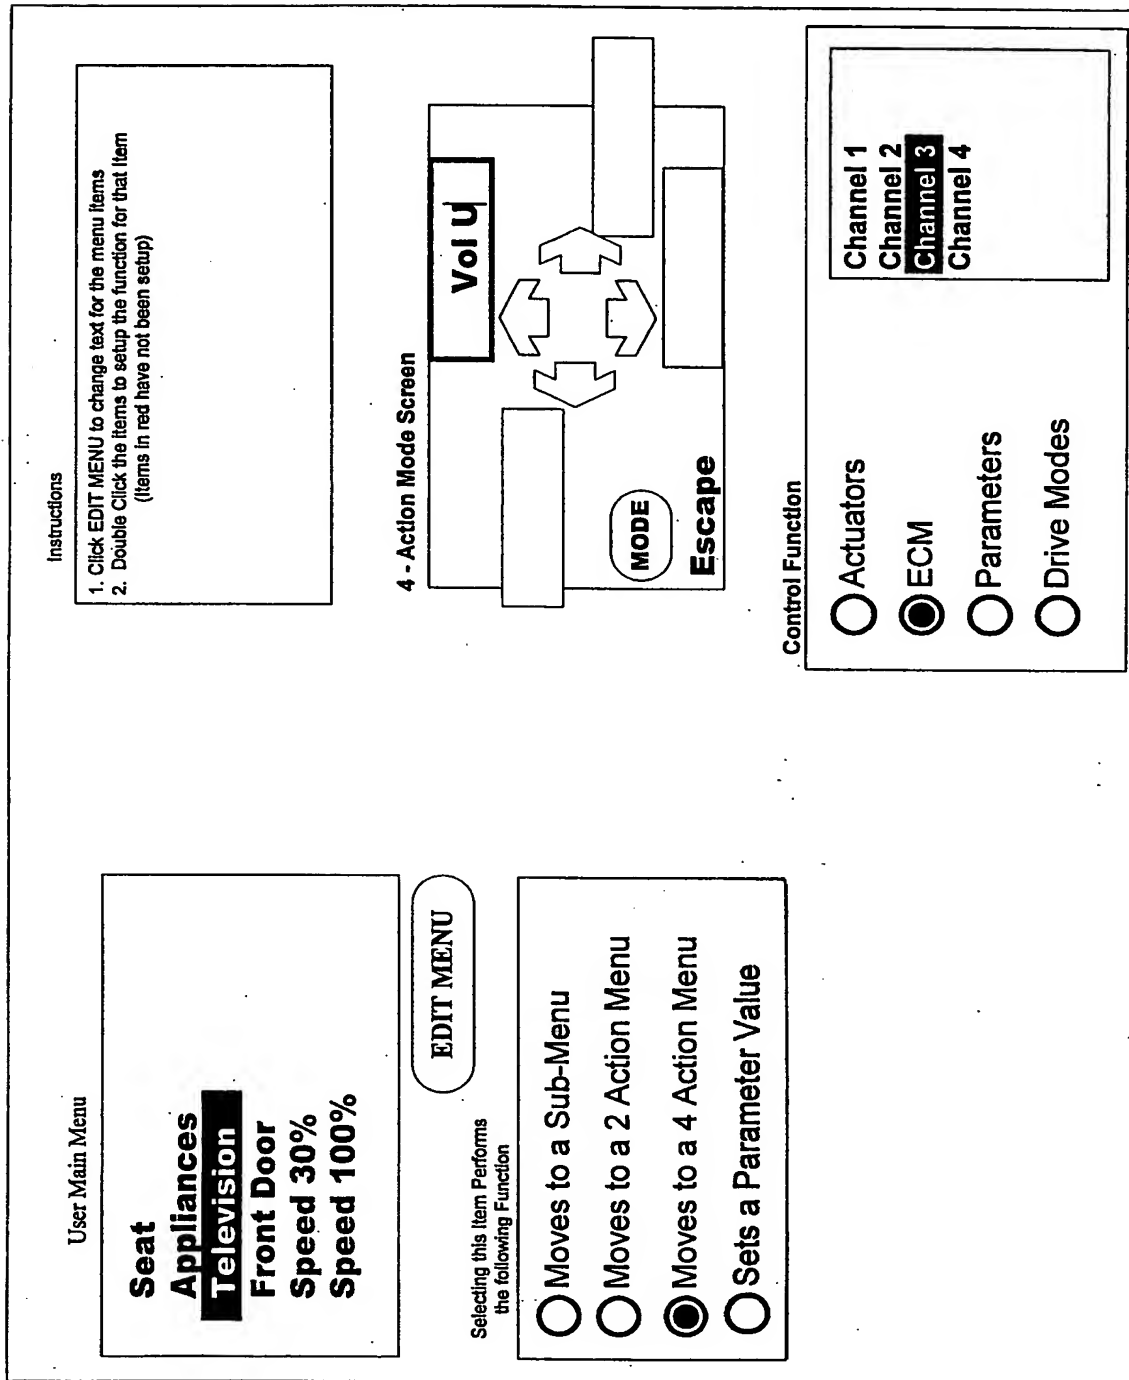


Fig. 10

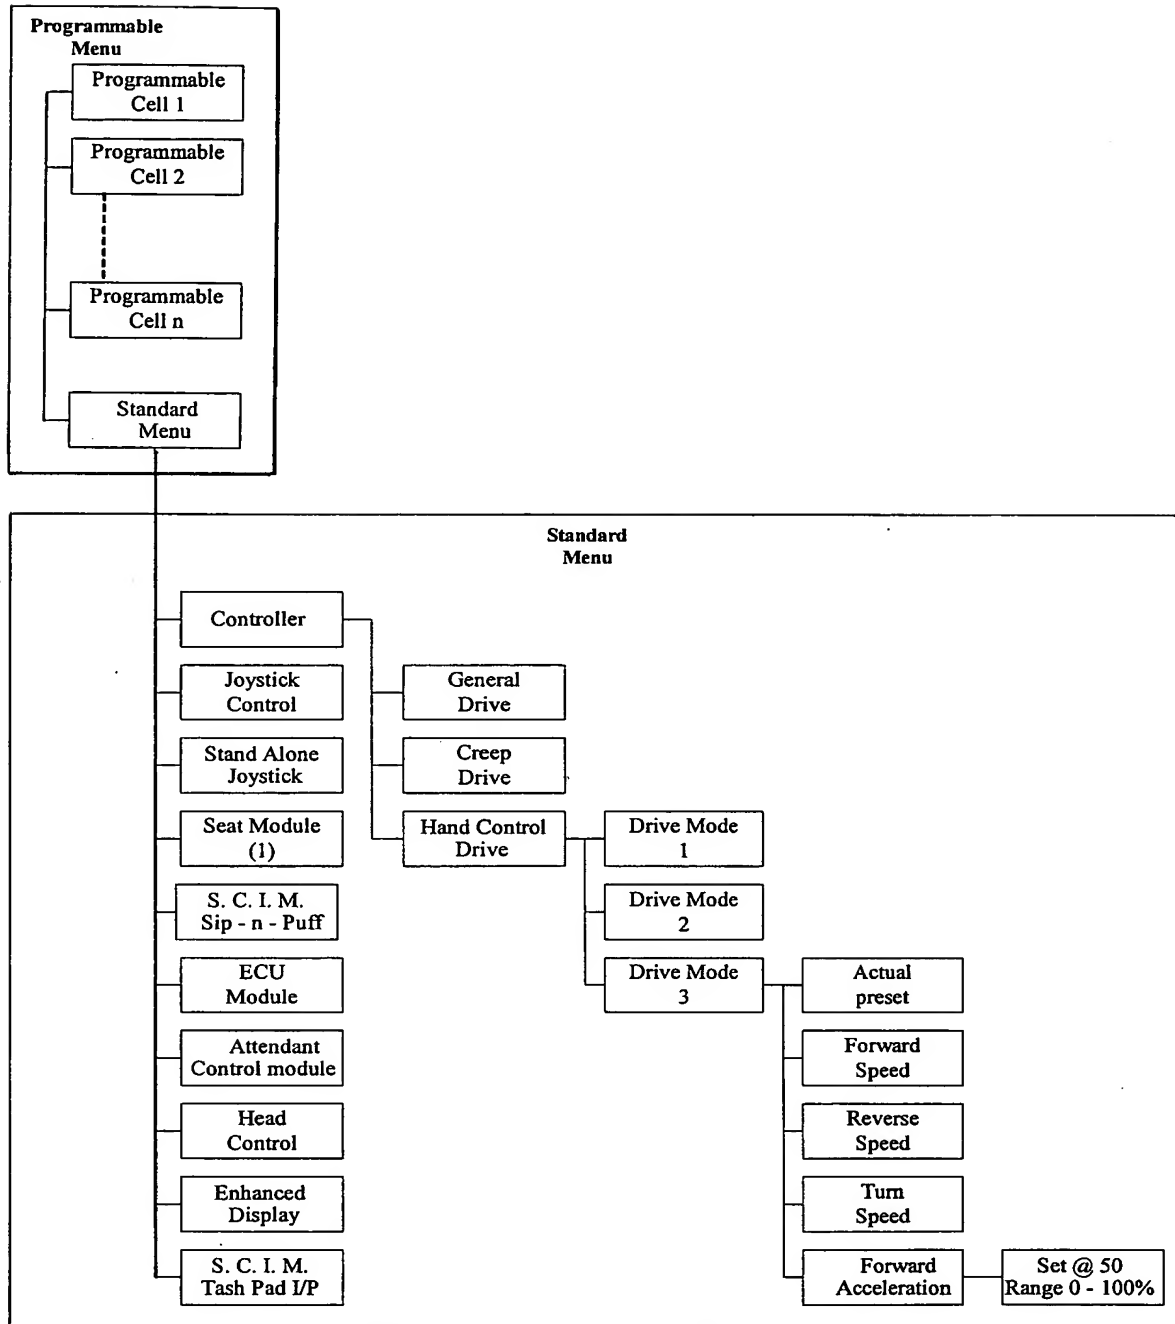


Fig. 11